
## **SONANCE SOUNDBAR**

SB46 M AND SB46 L QUICKSTART GUIDE - BRACKET WALL MOUNT



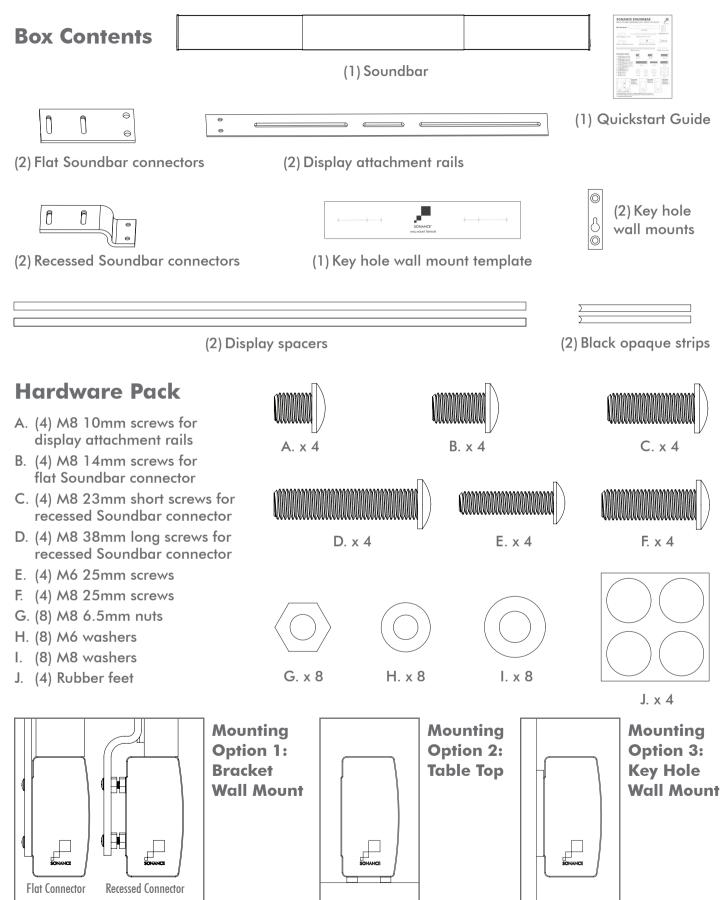

For **Mounting Option 2**: Table Top or **Mounting Option 3**: Key Hole Wall Mount (not attached to display) and slim display application, see detailed installation sheet at: **www.sonance.com/soundbar** 

## **SONANCE SOUNDBAR**

## SB46 M AND SB46 L QUICKSTART GUIDE - BRACKET WALL MOUNT






Verify wall mount will support combined weight of display and Soundbar.


**SB46 M** (24 lbs. installed) Suitable for displays 50"- 65" (1270mm to 1651mm)

**SB46 L** (29 lbs. installed) Suitable for displays 70"- 80" (1778mm to 2032mm)


For Mounting Option 2: Table Top or Mounting Option 3: Key Hole Wall Mount (not attached to display) and slim display application, see detailed installation sheet at: www.sonance.com/soundbar

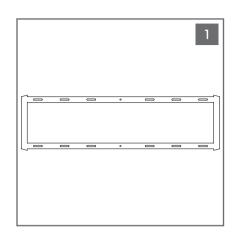


Install display mount to wall per manufacturer's instructions.

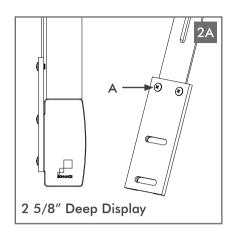

Choose & attach the correct Soundbar connector with (A) screws. The flat Soundbar connector will align with 2 5/8" (65mm) deep displays.

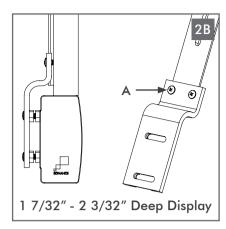


The recessed Soundbar connector will align with displays from 1 7/32" - 2 3/32" (31.74mm - 53mm) deep. Use (C) or (D) screws and (G) nuts.

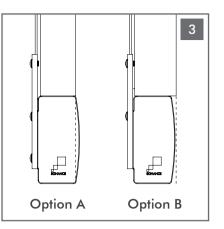


Alignment options for Soundbar:


A) Top edge of Soundbar aligned with front of display. B) Front radius of Soundbar aligned with front of display.

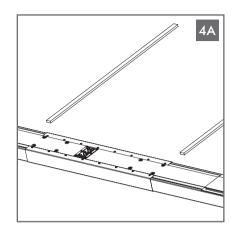


**Option A**: Use included 8mm display spacers. This creates the offset needed for bottom of display to align with top of Soundbar. Carefully place display on top of spacers. Be careful not to scratch front of display. Skip step 4B.

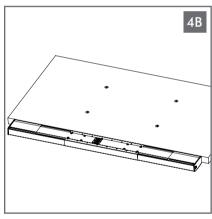


**Option B**: Lay display & Soundbar on same surface (without display spacers). Be careful to not scratch front of display.

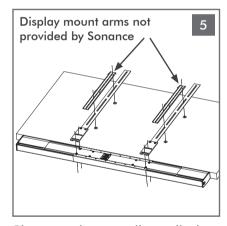


Place attachment rails on display & Soundbar making sure that holes and rails are aligned.

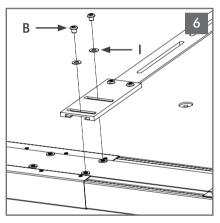


Position Soundbar as close to display as possible. Firmly fasten (B) screws & (I) washers to connect Soundbar to the Soundbar connectors.

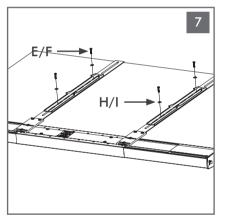


Install display wall bracket using spacers & screws supplied with display mount or (E)/(F) screws & (H)/(I) washers. Hardware will vary. It is recommended to keep spacers provided with display.

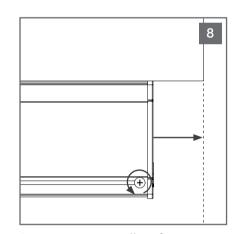


Loosen screw to allow for adjustment of Soundbar grille. No tool required.

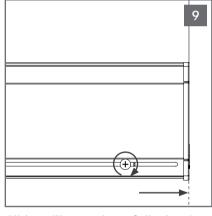


Slide grille to edge of display & tighten screw. No tool required.

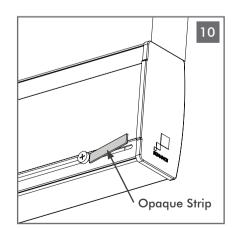


Cover open area with black opaque strip & cut to size. This will prevent any light from passing through grille.

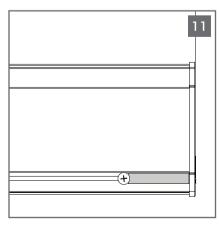


Finished view.

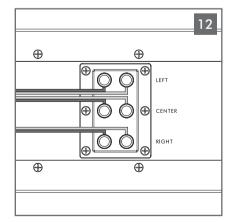

Complete wiring to Soundbar & display. If possible, leave enough wire out of the wall to allow for connection prior to mounting to wall bracket.

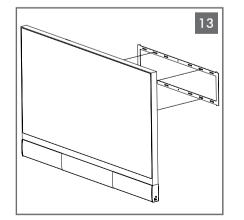

Carefully mount display & Soundbar to wall bracket. NOTE: When lifting, be careful not to place too much pressure on, or twist, the Soundbar. This could bend the bracket.

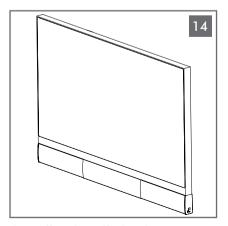


Soundbar installation is now complete & ready for audio system calibration.



For detailed installation sheet scan the QR code above or visit www.sonance.com/soundbar

P. 2 P. 3

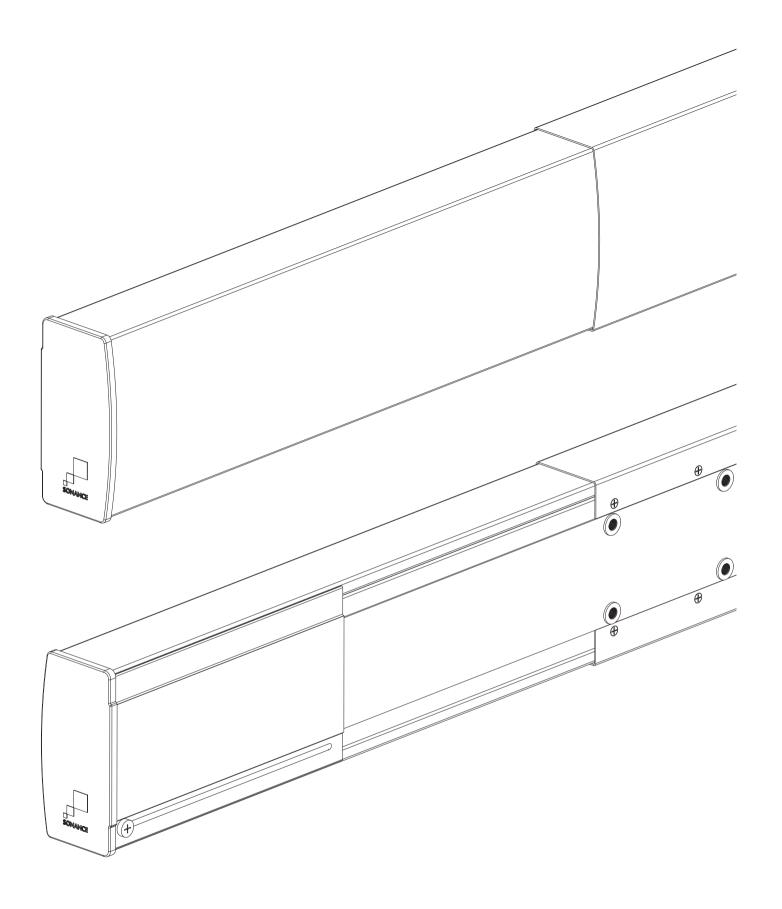



©2014 Sonance. All rights reserved. Sonance is a registered trademark of Dana Innovations.

Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest Sonance product specification information, visit our website: www.sonance.com

SONANCE • 212 Avenida Fabricante • San Clemente, CA 92672-7531 USA (800) 582-7777 or (949) 492-7777 • FAX: (949) 361-5151 • Technical Support: (800) 582-0772

www.sonance.com

33-5917 01.17.14